

RHYAS

THE PRODUCTS OF CHOICE

Data Sheet

Product name: **Compact E (electronic) Safe with Override Keys.**

Product Code: **01747**

- Main body made from 2mm steel, door made from 4mm steel.
- Powder coated both internally and externally.
- Programmable 3-8 digit combination plus the option to use the manual override key system, 2 keys supplied.
- Pre-drilled with 4 fixing holes.
- Fixings supplied.
- Uses AA batteries - included.
- Typical cash rating:- £2,000.
- Typical jewellery rating:- £20,000.
All ratings are subject to the end users individual insurance company's conditions.
- Sizes:-
 - External - 195mm (H) x 306mm (W) x 200mm (D)
 - Internal - 180mm (H) x 290mm (W) x 180mm (D)
- Weight:- 9kgs




OPERATING INSTRUCTION

CAUTION: Do not keep the keys in the safe itself.

1. OPENING THE SAFE

Opening the safe first time: - remove the small plastic cover ("B", see diagram 1) on the front panel, insert the key into the key hole and turn it counter-clockwise, at the same time, turn the doorknob ("A", see diagram 1) clockwise. This is also the method use for opening the safe by manual override.

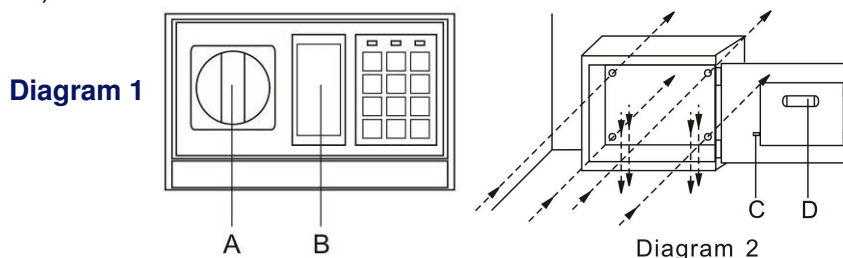

2. INSTALLING AND BATTERY REPLACEMENT

The safe requires 4×size "AA" (1.5V) batteries. Open the safe, open the battery cover plate "D" (see diagram 2) on the back of the door and install the batteries. Ensure the batteries are fitted with the correct corresponding polarity. Alkaline batteries are recommended. If the batteries are low on power the red light (in the middle of the number panel) will illuminate. After replacing any batteries you will need to reprogram your code.

3. PROGRAMMING THE CODE

- With the safe door open, press the red button "C" (see diagram 2) on the back of the door near the hinge, release it and you will hear two beeps. The yellow light will be on at the same time.
- Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter "A" or "B" within 15 seconds. The safe "bleeps" twice and the yellow light will go off, your personal code is now set.
- Write down your new combination immediately and check whether your new combination has been programmed or not on conditions of the safe door open.

4. USING YOUR SAFE

To open the safe, enter your personal code followed by the letter "A" or "B", you will hear a beep and the green light will be on, then turn the doorknob in clockwise direction to open the door within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 seconds before reattempting. If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

5. INSTALLING THE SAFE

The safe can be secured to floor, wall or in a cupboard, 8mm holes on the back and in the bottom of the safe provide various fixing options. **CAUTION:** The safe must be installed vertically. See diagram 2.